



## TRAC DOCK OPTIONS


### BENCH, KAYAK/ CANOE RACK, FLAG



BRACKETS MOUNT TO SIDE & BOTTOM OF FRAME USING 3/8" X 1 1/4" BOLTS W/ WASHER & NYLOCKS. KAYAK / CANOE RACK AND FLAG SLIDE INTO BRACKET AND TIGHTENED W/ SQUARE NUT AND 3/8 X 1" BOLT. KAYAK CAN ADJUST TO HEIGHT DESIRED

---

BOAT BUMPER

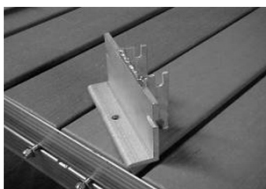

BRACKETS MOUNT TO SIDE & BOTTOM OF FRAME USING 3/8" X 1 1/4" BOLTS W/ WASHER & NYLOCKS. BUMPER SLIDES INTO ANGLE BRACKET AND ATTACHED USING 2 3/8 X 1 1/4" BOLTS W/ WASHER & NYLOCK. ADJUST TO DESIRED HEIGHT.

---

### CLEATS



TRADITIONAL CLEAT MOUNT TO BRKT, W/ 2 5/16 X 2" MACHINE BOLTS, THEN MOUNTS TO TRAC W/ 3/8" X 1 1/4" BOLTS W/ NYLOCKS




FLIP UP CLEAT MOUNTS TO SIDE OF TRAC USING 2 3/8" X 1" BOLTS W/ NYLOCKS

### END CAP



END CAP MOUNTS TO ENDS OF DOCK W/ 2 5/16 X 2 1/2" MACHINE BOLTS, LOCK WASHER AND NUTS

---

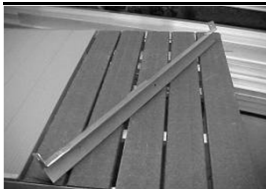

### WALL BRACKET

POSITION BRACKET ON WALL W/ 3" LEG FACING DOWN AND WELDED CLIPS FACING UP. FRAME IS 5" TALL, 5 1/4" W/ OLD MOISTURE SHIELD. ATTACH BRACKET W/ OWN HARDWARE. PLACE DOCK ON BRACKET AND INSERT 3/8 X 1" BOLT, BOTH SIDES

---

SHORE SIDE DOCKS  
SHORESIDEDOCKS.COM.  
508-248-9933  
RJIND@VERIZON.NET

6/22/2015

## LADDER





MOUNT LADDER TO SIDE OF FRAME USING THE TRAC W/ 3/8 X 1" BOLTS. ALIGN 1 SIDE OF LADDER OVER A CROSS BAR, DRILL 5/16" HOLE THRU DECKING AND CROSS BAR, BOLT DOWN W/ 5/16 X 4 MACHINE BOLT, MOUNT OTHER SIDE THRU DECKING. IF MOUNTING ON THE END OF THE DOCK USE MOUNTING BRACE, POSITION LADDER IN THE CENTER OF THE DOCK, PLACE BRACE UNDER THE 1 X 1 TUBE, THRU BOLT, SANDWICHING THE TUBE BETWEEN THE BRACE AND THE DECKING

### STAIR & RAILING





DRILL 5/16" HOLE ALIGNED W/ HOLES ON MOUNTING EAR ATTACH W/ 5/16 X 2 1/2" BOLT RAILINGS ARE PRE DRILLED USE 4 3/8 X 3" BOLTS

### CORNER SECTION

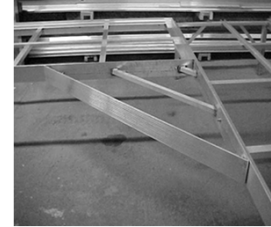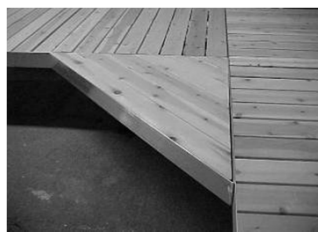

MOUNT CORNERS USING 3 3/8 X 1" BOLTS IN TRAC AND ALIGN W/ HOLES IN SIDE OF CORNER PLATES. OR A COMBINATION 3/8 X 1" BOLTS AND 3/8 X 2 1/2" IF MOUNTING TO THE END OF ONE DOCK.

## RAMPS

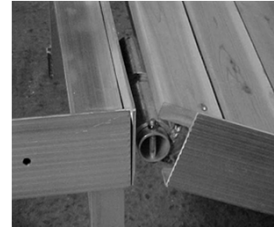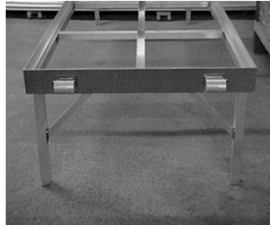

MOUNT FACE PLATE TO DOCK, USING PRE-DRILLED HOLES AND MOUNT W/ 5/16 X 2 1/2" MACHINE BOLTS. ALIGN HINGE BRACKETS AND INSERT HINGE PINS. SECURE WITH 4 HASP PINS

### BOLT ON BRACE



MOUNT TO BOTTOM OF LEGS WITH 2 3/8" ROUND U-BOLTS

### BOLT ON LEG



MOUNTS TO BOTTOM TRAC USING 3/8 X 1" BOLTS, WASHERS AND NYLOCKS

### CORNER BUMPER



MOUNTS TO SIDE TRAC USING 3/8 X 1" BOLTS, WASHERS & NYLOCKS & 1/4 X 1" TEK SCREW